OMRON

Super Manual Fiber Amplifier



Adjuster type standard that is the culmination of true ease and simplicity




Features

Self-explanatory LED bar displays of light levels


The previous manual type used the stability and incident level indicators to display the light level change, which was difficult to understand at a glance. The E3X-NA uses the LED bars to display the light level, ensuring the light level change at a glance.

Same "Wire-saving" Connector as E3X-DA-N

OMRON's original wiring-saving connector, which was inherited from the digital fiber amplifier E3X-DA-N, allows connection of up to 16 units.

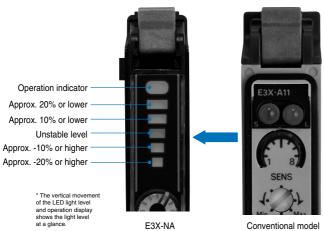

Conventional model

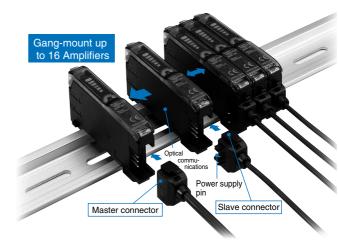


Features

Reduced wiring and space requirements for


power lines

Example for 5 Amplifiers E3X-NA Series

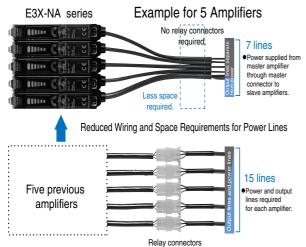

Same Sensing Distance as Previous Longdistance Models

200 mm Reflective Models

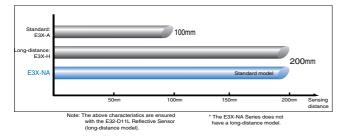

Approximately Seven Times the Detection Accuracy

Applied Fiber: E32-T16P (screen fiber) set at 100 mm. E3X-A1 1 (previous model) Minimum detection object: 2.0 mm dia. E3X-NA 0.3 mm dia.


Applied Fiber: E32-T16 (screen fiber) set at 100 mm. E3X-A11 (previous model) 7 times




Addition of high-speed type and waterproof type to the series

Optical Communications to Prevent Mutual Interference

Optical communication between amplifiers prevents mutual interference. Up to 5 fiber heads can be installed closely, except E3X-NA \Box F.

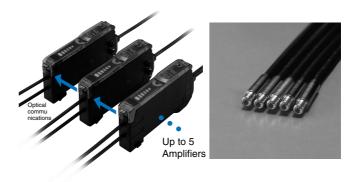

Dimensions and Designs Inherited from the E3X-DA-N Digital Fiber Amplifier

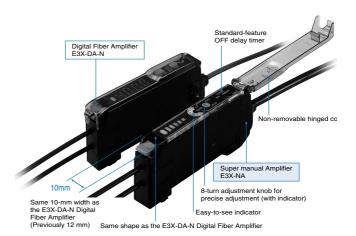

Ordering Information

Amplifier Units

Pre-wired

| Item | Shape | Control output | Model | | |
|------------------------|-------|----------------|------------|------------|--|
| nem | Shape | Control output | NPN output | PNP output | |
| Standard models | AN II | | E3X-NA11 | E3X-NA41 | |
| High-speed detection | | | E3X-NA11F | E3X-NA41F | |
| Mark-detecting models | | ON/OFF output | E3X-NAG11 | E3X-NAG41 | |
| Water-resistant models | | | E3X-NA11V | E3X-NA41V | |

Connector type

| Item | Shape | ape Applicable Connector Control ou | | | Мо | del | |
|--|-------|-------------------------------------|------------------------------|----------------|------------|------------|--|
| nem. | Onape | (ord | er separately) | Control output | NPN output | PNP output | |
| Standard models | | Master | E3X-CN11 | | E3X-NA6 | E3X-NA8 | |
| Standard models | | Slave | E3X-CN12 | ON/OFF output | LOAMAO | LUXINAU | |
| Water-resistant models (M8 Connector) | | | F-M421-40⊡-A F-M422-40⊡-A | | E3X-NA14V | E3X-NA44V | |

Amplifier Units Connectors (Order Separately) Note: Stickers for Connectors are included as accessories.

| Item | Shape | Cal | ole length | No. of conduc | tors | M | lodel | | | | | | |
|--|-------------------------------|----------|--------------|---------------|------|---------------------|-----------------------|--|--|---|------------|--|--------|
| Master connector | Í | 2 m | | 0 - | | | | | | 3 | 3 E3X-CN11 | | C-CN11 |
| Slave connector | | 2 m | | 1 | | E3X-CN12 | | | | | | | |
| Precautions for ordering | the connector type | | Amplifier Un | its | 1 | Applicable Connecto | or (order separately) | | | | | | |
| Refer to the following tables wh | en placing an order. Basical- | Туре | NPN | PNP | + | Master connector | Slave connector | | | | | | |
| ly, Amplifier Units and connectors are sold separately. | | Standard | E3X-NA6 | E3X-NA8 | | E3X-CN11 (3 wires) | E3X-CN12 (1 wire) | | | | | | |
| Please place an order after referring to the combination giv- When Using 5 Amplifier Units | | | | | | | | | | | | | |
| Amplifier Units (5 Units) + 1 Master Connector + 4 Slave Connectors | | | | | | | | | | | | | |

Sensor I/O Connectors (Order separately)

| Size | Cable type | Shape | | Cable length | | Model |
|------|----------------|----------|--------|--------------|-----------------|-----------------|
| | | Straight | | 2 m | | XS3F-M421-402-A |
| M8 | Standard cable | | | 5 m | 4 conductors | XS3F-M421-405-A |
| IVIO | L-shaped | | abarad | 2 m | 4 CONDUCTORS | XS3F-M422-402-A |
| | | | 5 m | 1 | XS3F-M422-405-A | |

Note: Refer to page NB-6 for details.

Accessories (Order Separately)

| Ν | loun | ing | Brac | kets |
|---|------|-----|------|------|
|---|------|-----|------|------|

| Shape | Applicable type | Model | Quantity |
|-----------------|---------------------------------|----------|----------|
| A CONTRACTOR | E3X-NA□ E3X-NA□F E3X-NAG□ | E39-L143 | 1 |
| Ser Contraction | E3X-NA⊡V | E39-L148 | I |

End Plate

| Shape | Model | Quantity |
|---|-------|----------|
| C S S S S S S S S S S S S S S S S S S S | PFP-M | 1 |

Rating/performance

Amplifier Units

| | | | Pre- | wired | | Connector type | | | |
|--|---------------|--|---|--|---|---|---|--|--|
| | Туре | Standard models | High-speed de- tection models | Mark-detecting models | Water-resistant models | Standard models | Water-resistant mod els (M8 Connector) | | |
| Model | NPN output | E3X-NA11 | E3X-NA11F | E3X-NAG11 | E3X-NA11V | E3X-NA6 | E3X-NA14V | | |
| Item | PNP output | E3X-NA41 | E3X-NA41F | E3X-NAG41 | E3X-NA41V | E3X-NA8 | E3X-NA44V | | |
| Light source (wave length) | | Red LED (680 nm |) | Green LED (520 nm) | Red LED (680 nm | n) | | | |
| Power suppl age | y volt- | 12 to 24 VDC ±10 | %, ripple (p-p): 109 | % max. | | | | | |
| Current cons | sumption | 35 mA max. | 35 mA max. (at power supply voltage 24 VDC) | 35 mA max. | | | | | |
| Control outp | ut | | A (residual voltage DN/Dark-ON switch | | pen collector outpu | t type (depends on | the NPN/PNP out | | |
| Response tir | me | Operation or re- set: 200 s max. * | Operating: 20 s max. Reset: 30 s max. | 200 s max. for o | peration and reset | respectively (See n | ote.) | | |
| Sensitivity adjust- ment 8-turn endless adjuster (with indicator) | | | | | | | | | |
| Protective circuits | | Reverse polarity protection, out- put short-circuit protection, mutu- al interference prevention (opti- cally synchro- nized) | Reverse polarity protection, out- put short-circuit protection | Reverse polarity protection, output short-circuit protection, mutual interfer- | | | | | |
| Timer function | on | OFF-delay timer: | 40 ms (fixed) | • | | | | | |
| Ambient illur | ninance | Incandescent lam | p: 10,000 lux max. | Sunlight: 20,000 lu | x max. | | | | |
| Ambient tem | perature | | | | oups of 4 to 11 Am no icing and cond | plifiers: -25 to +50°(ensation) | C, Groups of 12 to | | |
| Ambient hun | nidity | Operating/Storage: 35% to 85% RH (with no condensation) | | | | | | | |
| Insulation rea | sistance | 20 M min. at 50 | 0 VDC | | | | I | | |
| Dielectric str | ength | 1,000 VAC at 50/60 Hz for 1 minute | | | | | 500 VAC at 50/60 Hz for 1 minute | | |
| Vibration res | sistance | 10 to 55 Hz with a 1.5 mm double amplitude for 2 hrs each in X, Y and Z directions | | | | | | | |
| Shock resist | ance | Destruction: 500 n | n/s ² for 3 times ead | ch in X, Y, and Z di | rections | | 1 | | |
| Protective structure | | IEC 60529 IP50 (with Protective Cover attached) (with Protect | | | IEC 60529 IP66 (with Protective Cover attached) | IEC 60529 IP50 (with Protective Cover attached) | IEC 60529 IP66 (with Protective Cover attached) | | |
| Connection r | method | Pre-wired models | (standard length: 2 | | Connector type | M8 connector | | | |
| Weight (Pac state) | ked | Approx. 100 g | | | Approx. 110 g | Approx. 55 g | 65 g | | |
| | Case | PBT (polybutylene | e terephthalate) | | | | | | |
| Material | Cover | Polycarbonate | | | Polyethersul- fone (PES) | Polycarbonate | Polyethersul- fone (PES) | | |
| Accessories | | Instruction manua | l | | | | | | |

* If 8 or more Units are installed side-by-side, the response time will be 350 s max.


Amplifier Unit Connectors

| Item | Model | E3X-CN11 E3X-CN12 | | | | | |
|--------------------|-------------------|--|-----------------------------|--|--|--|--|
| Rated c | ted current 2.5 A | | | | | | |
| Rated v | oltage | 50 V | | | | | |
| Contact | resistance | 20 m max. (20 mVDC max., 100 mA max.) [By connection with amplifier unit and connection with adjacent con nector (except conductor resistance of cable)] | | | | | |
| No. of in | sertions | 50 times (By connection with amplifier unit and connecti | on with adjacent connector) | | | | |
| Materi- | Housing | PBT (polybutylene terephthalate) | | | | | |
| al | Contacts | Phosphor bronze/gold-plated nickel | | | | | |
| Weight (state) | (Packed | Approx. 55 g | Approx. 25 g | | | | |


Characteristic data (typical)

Number of Turns of Sensitivity Adjuster


vs. Sensing Distance E32-T11L

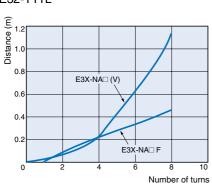


E32-D11L

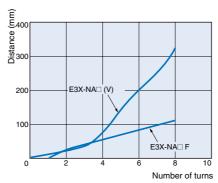

Sensing Distance vs. Hysteresis E32-T11L

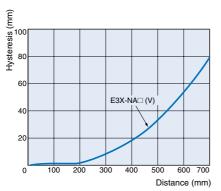

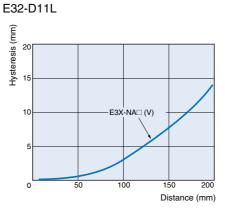


Output Circuit Diagram


NPN output

| Model | Operating status of output transistor | Timing chart | Mode selec- tion switch | Output circuit |
|-------------------------------------|--|--|----------------------------|--|
| E3X-NA11 E3X-NA6 E3X-NAG11 | Light ON | Incident Interrupted Operation ON (orange) OFF Output ON transistor OFF Load Operate (Relay) Reset (Between brown and black) | L ON (LIGHT ON) | Operation indicator (orange) Main circuit Black Control output Blue |
| E3X-NA11F E3X-NA11V E3X-NA14V | Dark ON | Incident Interrupted Operation ON T++ (orange) OFF Output ON transistor OFF Load Operate (Relay) Reset (Between brown and black) | D ON (DARK ON) | M8 Connector Pin Arrangement |

PNP output

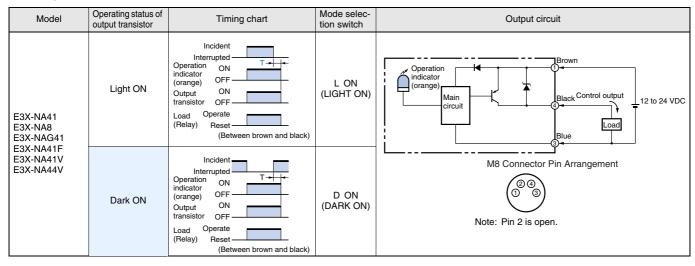


Connectors (Sensor I/O connectors)

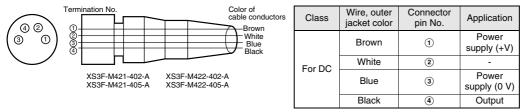

Note: Pin 2 is not used.

Nomenclature:

Amplifier Units

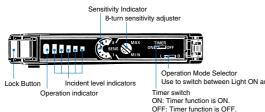

Use to switch between Light ON and Dark ON modes

Operation

Indicator status

In addition to the operation indicator (orange), E3X-NA has indicators that denotes the incident level (4 green and 1 red indicators). Use them for optical axis adjustment and maintenance.

| Indicator status (L/ON) | Operation in- dicator (L/ON) | Incident level |
|---|---------------------------------|--|
| Operation indicator Incident level indicators | Not lit | Approx. 80% to 90% of op- erating level |
| | Not lit | Approx. 80% to 90% of op- erating level |
| | Not lit or lit | Approx. 90% to 110% of operating level |
| | Lit | Approx. 110% to 120% of operating level |
| | Lit | Approx. 120% min. of oper- ating level |

Note: The rightmost indicator is turned ON at the "0 incident level".

Precautions

Correct Use

Amplifier Units

Design

Communications Hole


The window provided in the side face of the unit is a communication window for prevention of mutual interference when it is connected with the other unit. Note that the optional Mobile Console E3X-MC11 cannot be used. When the incident level of the sensor is excessive, mutual interference prevention may not be activated. At that time, make adjustment with the sensitivity adjuster. When the unit is used with the E3X-DA-N series, mutual interference prevention is not activated.

Mounting


Connection/removing of amplifier units

(Connection)

1. Install the Amplifier Units one at a time onto the DIN track.

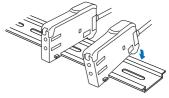

2. Slide the Amplifier Units together, line up the clips, and press the Amplifier Units together until they click into place.

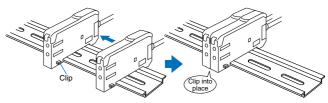

(Removing)

Slide one unit away from the other and remove them one by one. (Do not remove the connected units together from the DIN rail.)

Note: 1. When the amplifier units are interconnected, the operating ambient temperature changes depending on the number of connected amplifier units. Check "Ratings/Performance" 2. Before connecting or removing the units, always switch power off.

Operating Environment

Ambient Conditions

Always remove dust, dirt, etc. from the optical communication window, which may disable communication.

Miscellaneous


Protective Cover

Be sure to set the Protective Cover before use.


Amplifier Unit Connectors Installation

Installation Connectors

1. Insert the Master or Slave Connector into the Amplifier Unit until it clicks into place.

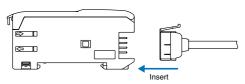


- 2. Join Amplifier Units together as required after all the Master and Slave Connectors have been inserted.
- 3. Apply the supplied seal to the non-connection surface of the master/slave connector.

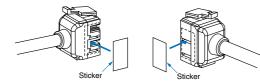

Note: Apply the seal to the grooved side.

Removing Connectors


- 1. Slide the slave Amplifier Unit for which the Connector is to be removed away from the rest of the group.
- 2. After the Amplifier Unit has been separated, press down on the lever on the Connector and remove it. (Do not attempt to remove Connectors without separating them from other Amplifier Units first.)

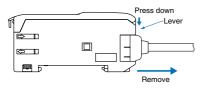

Mounting End Plate (PFP-M)


Depending on the installation type, an Amplifier Unit may move during operation. In this case, use an End Plate. Before installing an End Plate, remove the clip from the mas-

ter Amplifier Unit using a nipper or similar tool.

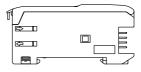


The sensor bottom is also equipped with the clip removing mechanism.

1. Insert the clip to be removed into the slit underneath the clip on another Amplifier Unit.

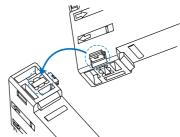


2. Remove the clip by rotating the Amplifier Unit.

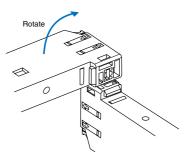


Pull Strengths for Connectors (Including Cables) E3X-CN11: 30 N max. E3X-CN12: 12 N max.

E3X-NA

Dimensions (Unit: mm)

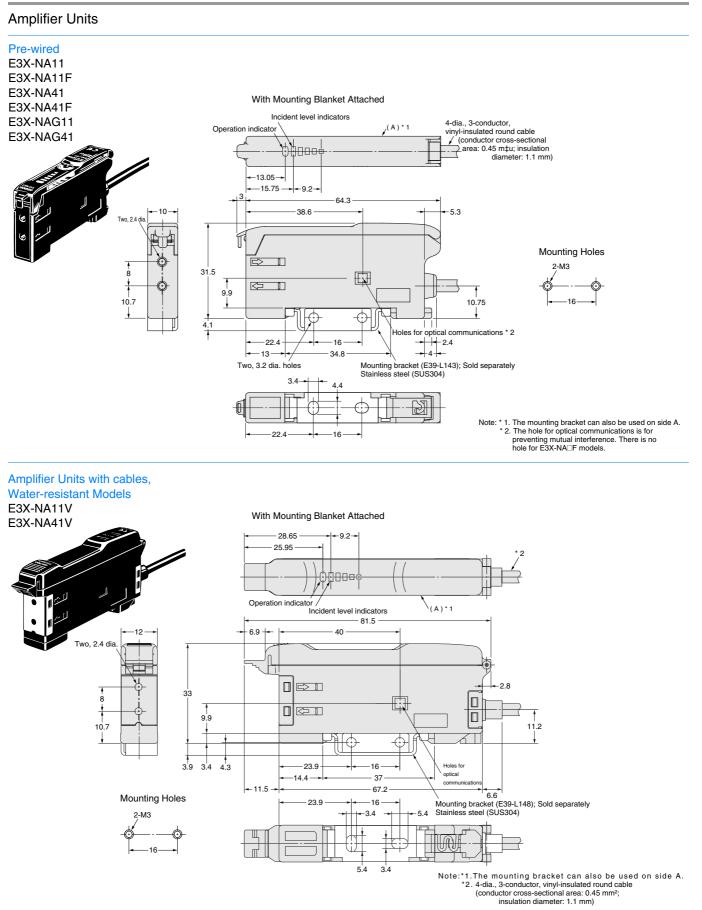

OMRON

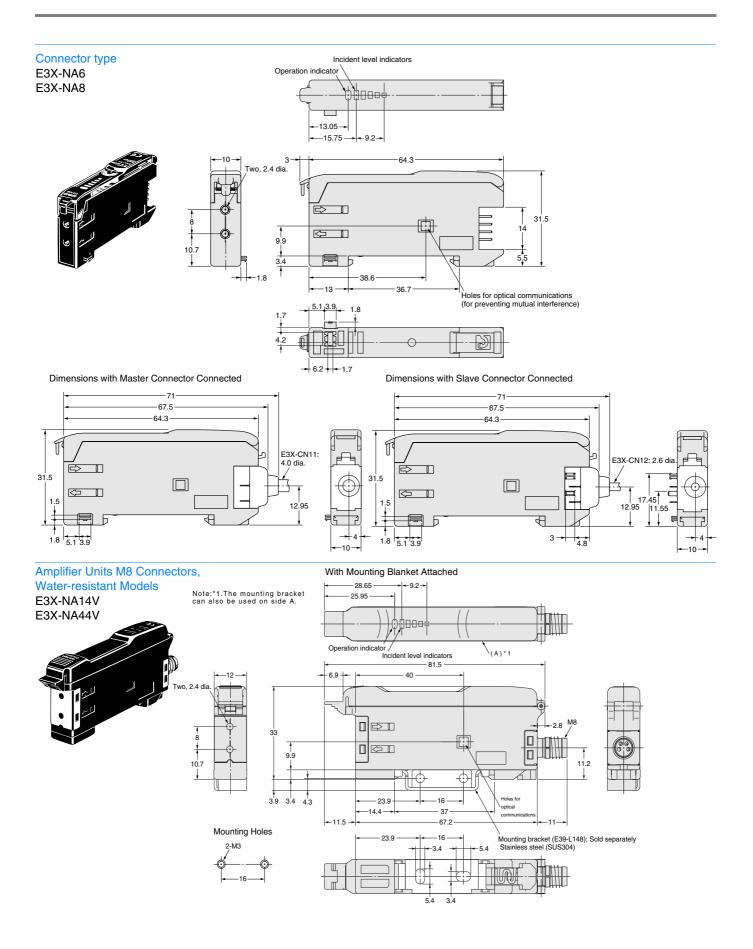

E3X-NA

Amplifier Unit Connectors Master connector E3X-CN11 2,000+50 -10 ←10.7→ _<u>6.8</u>_| **+**6+ 4-dia., 3-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.45 mm²; insulation diameter: 1.1 mm) 2.9 2.6 + 4 dia 14.4 **+**6+ **←**8.4→ 0.8 - 30± 2 **-10**±2**+** - 50⁺⁵ -15.1 Slave connector E3X-CN12 2,000+50 -10 -10.7--6.8-| +6 4-dia., 3-conductor,vinyl-insulated round cable (conductor cross-sectional area: 0.45 mm²; insulation diameter: 1.1 mm) 2.9 2.6 dia. 4 ⊒ +8.4+ +10±2→ 0.8 50⁺⁵ **⊷**15.1

Accessories (Order Separately) Mounting Brackets H-5

A-451

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. E23E-EN-01

In the interest of product improvement, specifications are subject to change without notice.